Miele

# Operating and installation instructions

## Built-in Tepan
## CT 400 P

## Mobile Tepan
## CT 400 MP

To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

en - GB

M.-Nr. 06 760 290

# Contents

**Description of the appliance** . . . 3
Built-in Tepan . . . 3
Mobile Tepan . . . 4
**Warning and Safety instructions** . . . 6
**Caring for the environment** . . . 11
**Operation** . . . 12
Cleaning for the first time . . . 12
Switching on and off . . . 12
Settings . . . 13
Tips . . . 14
**Cleaning and care** . . . 15
Tepan plate (Built-in and Mobile Tepan) . . . 15
Mobile Tepan
Stainless steel surrounds and framework . . . 16
Wooden surfaces (Mobile Tepan) . . . 16
**Problem solving guide** . . . 17
**Optional accessories** . . . 18
**After sales service, data plate** . . . 19
**CT 400 P installation instructions** . . . 20
Safety instructions for installation . . . 20
Accessories . . . 21
Protection during transport . . . 21
Building-in dimensions . . . 22
Worktop cut-out . . . 23
Drilling holes in the furniture front panel for the switching unit . . . 24
Securing the switching unit . . . 25
Fitting the tepan plate . . . 26
Fitting the indicator light covers and the control . . . 27
Protective shelf . . . 28
Sealant . . . 28
**Shelf CT 400 MA** . . . 29
**Electrical connection** . . . 30
General notes . . . 30
Mobile Tepan . . . 30
Built-in Tepan . . . 31

## Built-in Tepan

### CT 400 P

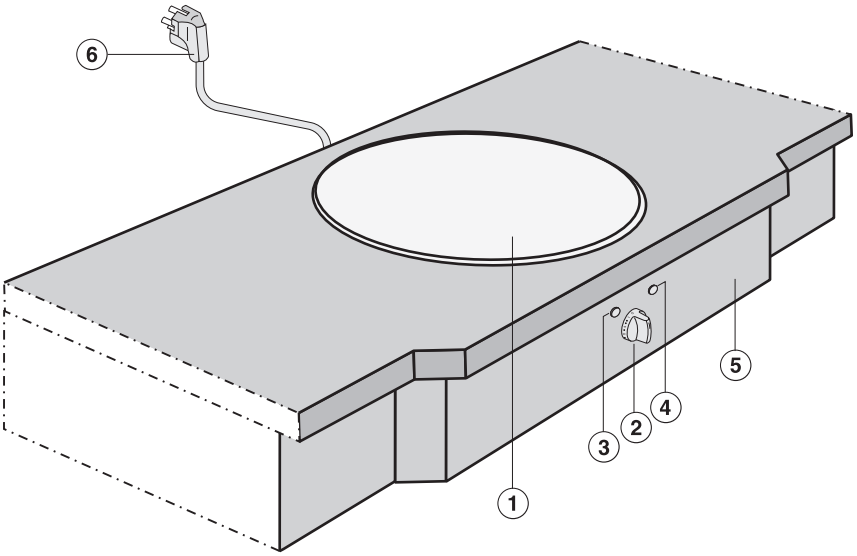


① Tepan plate (approx. Ø 40 cm when heated up)

② Control

③ In-operation indicator light (yellow)

④ Temperature indicator light (red)

⑤ Kitchen furniture front

⑥ Mains connection cable *

* The appliance may be supplied with or without a plug depending on country of destination.

The plug shown may differ from the one supplied with your appliance.

# Description of the appliance

## Mobile Tepan

### CT 400 MP

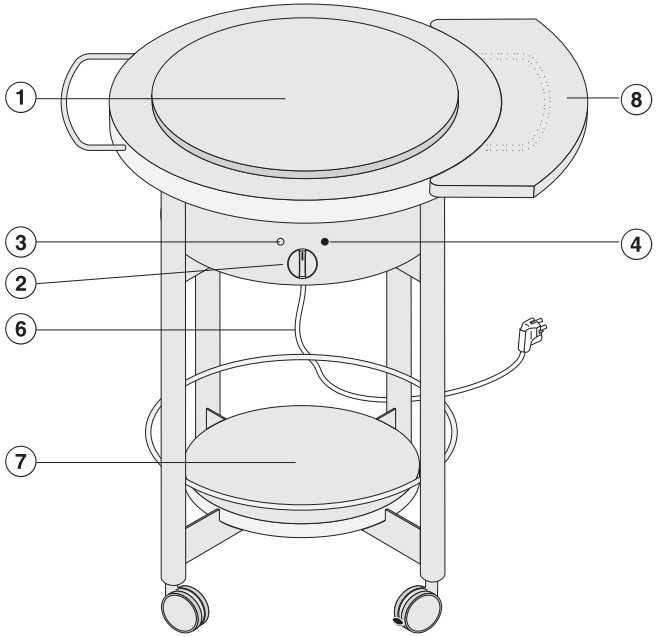


① Tepan plate (approx. Ø 40 cm when heated up)

② Control

③ In-operation indicator light (yellow)

④ Temperature indicator light (red)

⑥ Mains connection cable

⑦ Shelf

⑧ Shelf CT 400 MA (see "Optional accessories")

The plug shown may differ from the one supplied with your appliance.

### CT 400 MP dimensions

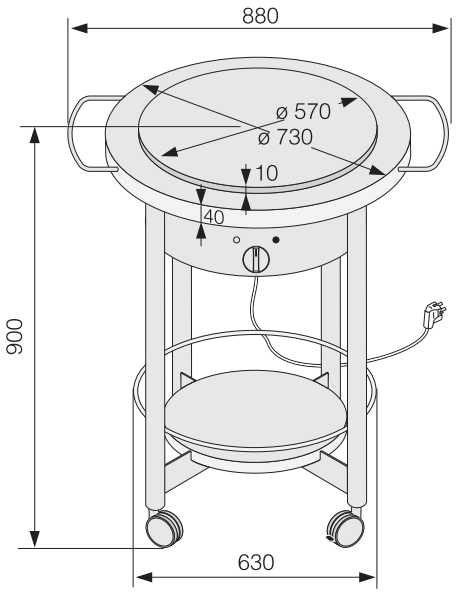

This appliance complies with all current safety requirements. Inappropriate use can lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

## Correct application

▶ This appliance is not designed for commercial use. It is intended for use in domestic households and in similar working and residential environments such as:

– Shops

– Offices and showrooms

and by residents in establishments such as:

– Hostels and guest houses.

▶ The appliance is intended for domestic use only to cook food and keep it warm.
Any other use is not supported by the manufacturer and could be dangerous. Miele cannot be held liable for damage resulting from incorrect or improper use or operation of the appliance.

▶ This appliance is not intended for use by people with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised while using it or have been shown how to use it correctly by a person responsible for their safety.

## Safety with children

▶ This appliance is only intended for use by adults who have read these instructions. This appliance is not a toy! To avoid the risk of injury, keep children well away and do not let them play with it or use the controls. They should be supervised whenever you are working in the kitchen.

▶ Older children may use the appliance only when its operation has been clearly explained to them and they are able to use it safely, recognising the dangers of misuse.

▶ The appliance gets hot when in use and remains hot for quite a while after being switched off. To safeguard against burning, keep children well away from the appliance at all times.

▶ Do not store anything which might arouse a child's interest in storage areas above or next to the appliance. Otherwise they could be tempted into climbing onto the appliance with the risk of burning themselves.

▶ Packaging, e.g. cling film, polystyrene and plastic wrappings, must be kept out of the reach of babies and young children. Danger of suffocation. Dispose of or recycle all packaging safely as soon as possible.

## Technical safety

▶ Before installation, check the appliance for visible signs of damage. Under no circumstances should you use it if it has been damaged. It could be dangerous.

▶ The electrical safety of this appliance can only be guaranteed when continuity is complete between the appliance and an effective earthing system which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and regularly tested, and where there is any doubt, the household wiring system should be inspected by a qualified electrician. Miele cannot be held liable for the consequences of an inadequate earthing system (e.g. electric shock).

▶ Before connecting the appliance to the mains supply, make sure that the voltage and frequency correspond to the rating on the data plate, otherwise the appliance could be damaged. Consult a qualified electrician if in any doubt.

▶ For safety reasons, this appliance may only be used when it has been built in.

▶ Never open the housing of the appliance.
Tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.

▶ Installation, maintenance and repairs may only be carried out by a suitably qualified and competent person in strict accordance with current national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. Miele cannot be held liable for unauthorised work.

▶ During installation, maintenance and repair work, the appliance must be disconnected from the mains electricity supply.

▶ While the appliance is under guarantee, repairs should only be undertaken by a service technician authorised by Miele. Otherwise the guarantee is invalidated.

▶ Faulty components must only be replaced by genuine Miele original spare parts. The manufacturer can only guarantee the safety of the appliance when Miele replacement parts are used.

▶ If the connection cable is damaged, it must be replaced by a suitably qualified electrician with a specialist connection cable of type H 05 V V-F (pvc insulated), available from the Miele Spare Parts Department.

▶ Do not connect the appliance to the mains electricity supply by a multi-socket adapter or an extension lead. These do not guarantee the safety of the appliance (e.g. danger of overheating).

▶ This appliance may be connected via a fused plug and switched socket. If you wish to connect it to a fused spur connection unit, or if the appliance is supplied without a plug, it must be installed and connected by a suitably qualified and competent person in strict accordance with current local and national safety regulations. The manufacturer cannot be held liable for damage caused by incorrect installation or connection.

▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings in a clean condition at all times. Any damage caused by cockroaches or other vermin will not be covered by the guarantee.

## Correct use

▶ The appliance gets hot when in use and remains hot for quite a while after being switched off.
Caution: Danger of burning.

▶ Do not leave the appliance unattended whilst it is being used. Oil and fat are potential fire hazards as they can ignite if overheated.

▶ If oil or fat does catch fire, do not attempt to put out the flames with water. Use a suitable fire blanket, saucepan lid, damp towel or similar to smother the flames.

▶ Do not use the appliance to heat up the room. Due to the high temperatures radiated, objects near the appliance could catch fire. The life of the appliance could also be reduced.

▶ Always use heat-resistant pot holders or gloves when working with a hot appliance. Do not let them get damp or wet, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself.

▶ Do not flambé under a cooker hood. The flames could set the cooker hood on fire.

▶ Do not use the appliance as a resting place for anything else. When the appliance is switched on either deliberately or by mistake, or when there is residual heat present, there is the risk of metal objects heating up, with a danger of burning.
Depending on the material, other objects left on the appliance could also melt or catch fire.
Switch the appliance off after use.

▶ Do not cover the appliance, e.g. with a cloth, kitchen foil, etc. This could be a fire hazard if the appliance were switched on by mistake.

▶ Do not heat up unopened tins or jars of food on the appliance as pressure will build up in the tin or jar, causing it to explode. This could result in injury and scalding or damage.

▶ Do not use plastic utensils on the appliance, as the tepan plate gets very hot. Even heat-resistant plastic utensils are unsuitable.

▶ When using an electrical appliance, e.g. a hand-held food blender, near the tepan, ensure that the cable of the electrical appliance does not come into contact with the hot appliance. The insulation on the cable could become damaged, giving rise to an electric shock hazard.

▶ Always ensure that food is sufficiently cooked or reheated. Some foods may contain micro-organisms which are only destroyed by thorough cooking at a sufficiently high temperature for long enough. Therefore, when cooking or reheating food such as poultry, it is particularly important that the food is completely cooked through. If in doubt, select a longer cooking or reheating time.

▶ If the appliance is installed behind a kitchen furniture door, it may only be used with the furniture door open. Only close the door when the appliance is switched off and the residual heat indicators have gone out.

▶ The CT 400 P Tepan must not be set up and used outdoors.
The mobile CT 400 MP Tepan can be used outside, however it must be protected from the elements, e.g. it must not be allowed to get damp.

▶ When using the mobile tepan apply the break to prevent it moving during use.

▶ Remove the lower shelf if the mobile tepan needs to be tipped to one side when it is being moved (e.g. to carry it up steps).

▶ Only lift the mobile tepan by its handles. Never use the shelf fitted on the side of the tepan plate to lift it.

Miele cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

## Disposing of the packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal, and should be recycled.

Ensure that any plastic wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.

## Disposing of your old appliance

Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.

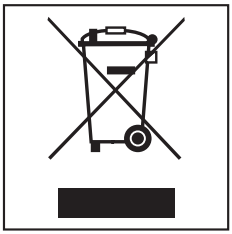

Please dispose of it at your local community waste collection / recycling centre, or contact your dealer for advice. Ensure that it presents no danger to children while being stored for disposal.

Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the "After sales service, data plate" section of this booklet.

## Cleaning for the first time

- Remove any protective foil.
- Then clean with a solution of washing-up liquid and warm water, and dry with a soft cloth.

The metal components have a protective coating which may give off a slight smell when heated up for the first time.
The smell and any vapours will dissipate after a short time, and do not indicate a faulty connection or appliance.

## Switching on and off

To switch the tepan plate **on**, turn the control in a **clockwise** direction ①. To switch **off**, turn the control in an **anti-clockwise** direction ②.

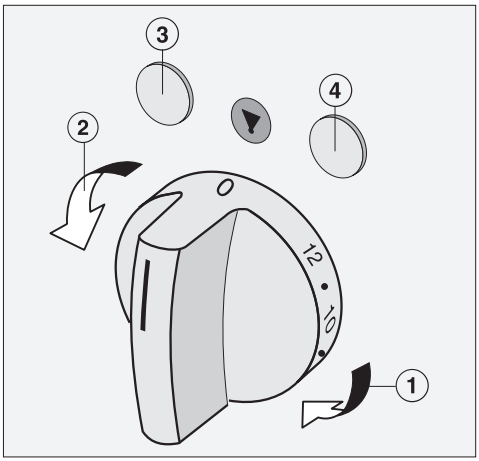


Only turn the control clockwise as far as "12" and anti-clockwise back to "0" again to switch it off. Do not attempt to turn it all the way round from the "12" position to "0" or vice versa. This will damage the control.

When the appliance is switched on, the in-operation indicator light ③ and the temperature indicator light ④ come on. The temperature indicator light will switch on and off intermittently in conjunction with the heating element.

## Settings

| Cooking process | Settings |
|---|---|
| Keeping cooked food warm | 1 - 2 |
| Steaming fruit, e.g. apple slices, peach halves, sliced bananas, etc. | 2 - 4 |
| Gentle stir frying of chopped/sliced vegetables, e.g. leeks, mushrooms, green/red peppers, onion etc. | 5 - 7 |
| Gentle frying of fish, meat, sausages, escalopes etc. | 7 - 9 |
| Rapid frying in succession of meat, fish fried eggs, pancakes, hash browns etc. | 9 - 11 |
| Frying steaks, potato cakes, marinated meats, e.g. kebabs, stir fry meats etc. | 11 - 12 |

These settings are a guide only. The actual cooking time will depend on the type of food, its texture and thickness as well as personal taste.

## Tips

Wipe the surface of the tepan plate before each use to remove any dust particles or other soiling which may have settled on it since it was last used.

– Pre-heat the tepan plate before use for 10 -15 minutes.

– It is important to get the tepan sufficiently hot before use, particularly when browning and sealing meat. If it is not hot enough, the meat will lose too much juice and become tough.

– For frying, only use the minimum amount of oil or fat. With marinated food, no fat or oil is needed. Wait until the temperature indicator light has gone out before adding cooking fat.

– Only use fats and oils which can be heated to high temperatures.

– Marinating meat helps tenderise the meat as well as provide extra flavour.

– Pat wet food dry with kitchen paper before cooking to prevent it spitting.

– To prevent meat drying out, do not season with salt until after it has been cooked.

– Thicker cuts should be cooked first on a high heat and then finished on a lower setting.

– Any residues which have stuck to the tepan plate can be used to make a sauce. Add a little water, stock or wine and loosen with a heat-resistant spatula.

⚠ Do not use a steam cleaning appliance to clean this appliance. The steam could reach electrical components and cause a short circuit.

The appliance should be cleaned regularly, preferably after each use. Let it cool down to room temperature before cleaning.
To avoid water marks and limescale deposits, use a soft cloth to dry surfaces that have been cleaned with water.

**To avoid damaging the surface of your appliance, do not use:**

- cleaning agents containing soda, alkalines, ammonia, acids or chlorides,
- cleaning agents containing descaling agents,
- stain or rust removers,
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners,
- solvent-based cleaning agents,
- dishwasher cleaner,
- grill and oven cleaners,
- glass cleaning agents,
- hard, abrasive brushes or sponges, e.g. pot scourers, brushes or sponges which have been previously used with abrasive cleaning agents.

## Tepan plate (Built-in and Mobile Tepan)

The cooking surface can be cleaned using a proprietary ceramic hob and stainless steel cleaning agent (see "Optional accessories"). Follow the manufacturer's instructions on the packaging.

Ensure that every trace of cleaning agent has been removed from the surface by wiping carefully with a damp cloth. Any remaining traces could affect food the next time you use the appliance.

The tepan plate should be cleaned after each use.

Use a spatula to remove any large particles immediately.

Allow the tepan plate to cool down until it can be touched by hand and then loosen the soiling with warm water and a little washing up liquid. Remove the soiling with a spatula and then wipe the surface with a damp cloth.

Then clean the cooking surface thoroughly with a few drops of a proprietary cleaning agent for stainless steel surfaces and a clean, damp cloth. Lemon juice applied with a non-scouring sponge can be used to remove blueish marks from the cooking surface.

Finally wipe the tepan plate with a damp cloth and then dry it with a clean, soft cloth.

Important - Conditioning agents for stainless steel must not be used on the cooking surface!

## Mobile Tepan
## Stainless steel surrounds and framework

Remove the shelf at the side before cleaning to avoid any cleaning agent becoming lodged in the gap between the shelf and the appliance.

Clean stainless steel surfaces using an E-Cloth (see "Optional accessories") or with a solution of warm water and a little washing-up liquid applied with a soft sponge. Wipe dry using a soft cloth.

A ceramic and stainless steel hob cleaning agent can be used if required (see "Optional accessories"). Apply with an even pressure following the direction of the "grain".

A conditioning agent for stainless steel can be used after cleaning to help prevent re-soiling (see "Optional accessories"). Do not use it on the cooking surface!
Apply sparingly with a soft cloth following the instructions on the packaging.

## Wooden surfaces (Mobile Tepan)

Wood is a natural product. Differences in colour and grain are a natural characteristic of wood and therefore quite normal in the tepan unit.

Any soiling to wooden surfaces on the mobile tepan can be removed with a damp cloth.

To help protect wooden surfaces a suitable oil for treating wood can also be applied.

Repairs to electrical appliances must only be carried out by a suitably qualified and competent person in strict accordance with current local and national safety regulations. Unauthorised repairs could be dangerous. The manufacturer cannot be held liable for unauthorised work.

**What to do if ...**

**... the appliance does not heat up when it has been switched on**

Check whether the house mains fuse has blown. If it has contact a qualified electrician or Miele. (See back page for address).

# Optional accessories

Miele branded cleaning and care products are available for your appliance.

These can be ordered from Miele (see back cover for address) or via the internet at www.miele-shop.com.

**Shelf CT 400 MA**

The shelf can be fitted either on the right or the left hand side of the mobile tepan unit.

**Ceramic and stainless steel hob cleaning agent 250 ml**

Removes heavy soiling, limescale deposits and light discolouration

**Stainless steel conditioning agent 250 ml**

Removes water marks, flecks and finger prints.
Helps keep the appliance looking good for longer.
N.B. This product must not be used on the cooking surface.

**E-Cloth (microfibre cloth)**



Removes finger marks and light soiling.

In the event of any faults which you cannot remedy yourself, or if the appliance is under guarantee, please contact:

– Your Miele dealer, or

– Miele (see back cover for address).

Please note that telephone calls may be monitored and recorded to improve our service.

When contacting Miele, please quote the model and serial number of your appliance. These are given on the data plate.

N.B. A call-out charge will be applied for service visits where the problem could have been resolved as described in these instructions.

Space in which to stick the extra data plate supplied with the appliance. Ensure that the model number is the same as the one on the front of these instructions.

## Safety instructions for installation

Fit wall units and extractor hood before fitting the tepan to avoid damaging the surface.

▶ The veneer or laminate coatings of worktops (or adjacent kitchen units) must be treated with 100 °C heat-resistant adhesive which will not dissolve or distort.
Any backmoulds must be of heat-resistant material.

▶ This equipment may only be used in mobile installations if a risk assessment has been carried out by a suitably qualified engineer.

▶ Connection should be made via a suitable isolator or a double pole fused spur connection unit which complies with current national and local safety regulations and the on/off switch should be easily accessible after the appliance has been built-in. See "Electrical connection - Built-in Tepan" for more details.

▶ The appliance must not be built in over a fridge, fridge-freezer, freezer, dishwasher, washing machine or tumble dryer.

▶ After installation, ensure that the connection cable cannot come into contact with the underside of the appliance. Make sure that there is no mechanical obstruction, such as a drawer, which could damage it.

▶ A protective shelf should be fitted underneath the appliance to ensure that the underside of the appliance cannot accessed or touched once it has been installed (see "Protective shelf").

▶ Observe carefully the safety distances given on the following pages.

▶ Do not use any sealant except where expressly instructed to do so. The seal underneath the appliance provides a sufficient seal for the worktop (see "Sealant").

All dimensions in this instruction booklet are given in mm.

## Accessories

– 1 control with marked settings
– 4 Spax screws 4 x 15 mm for securing the switching unit
– 2 indicator light covers; one red, one yellow
– 1 adhesive symbol for the "0" position
– 1 drilling template
– Sealing strip

## Protection during transport

For protection during transport, the switching unit ① is secured to the underside of tepan with two domed nuts ②.

■ Loosen the two domed nuts ② to remove the switching unit from the threaded bolts.

Important:
To avoid scratching the worktop during installation, the domed nuts ② should be screwed back on to the bolts.

① Switching unit
② Domed nuts
③ Temperature limiter
④ Data plate

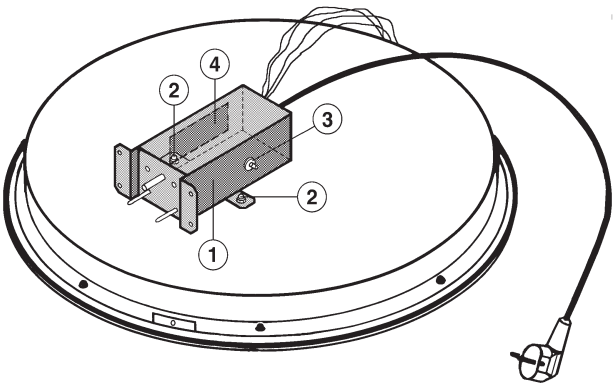

## Building-in dimensions

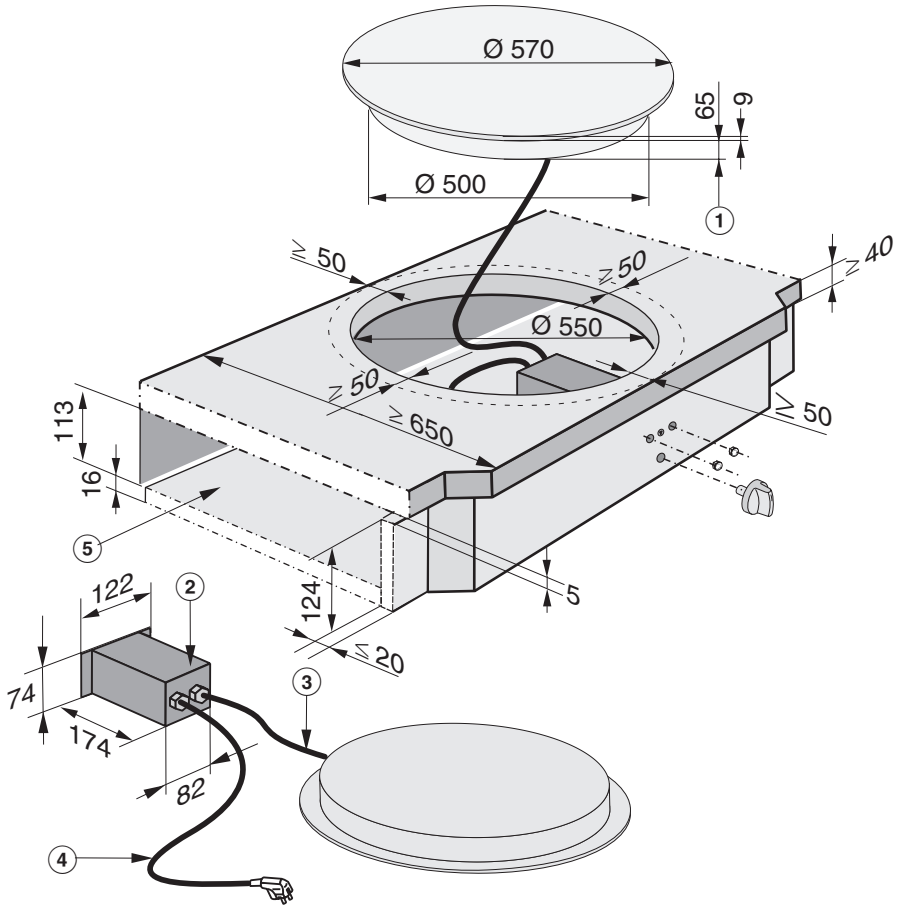


① Casing depth
② Integrated switching unit (this is fitted behind the kitchen furniture front with only the control visible)
③ Connecting cable - 500 mm long
④ Mains connection cable - 1800 mm long *
⑤ Protective shelf

The appliance may be supplied with or without a plug depending on country of destination.

## Worktop cut-out

- Prepare the worktop cut-out as shown in the diagram.
  Make sure that the distance between the worktop cut-out and the edge of the worktop is at least 50 mm.
- Seal the cut surfaces with a suitable heat-resistant sealant to avoid swelling caused by moisture.

## Drilling holes in the furniture front panel for the switching unit

Use the drilling template supplied ⑤ to drill the holes for the switching unit in the furniture front panel.

**Drill 3 holes through the front panel, working from the front as follows:**

① for the switching unit spindle

② for the yellow indicator light

③ for the red indicator light

To secure the switching unit, make **4 pilot holes** ④ in the front panel **working from the rear**.

Important:
Humidity may cause variation in the size of the drilling template.
**Please check the dimensions before drilling.**

On a 40 mm thick worktop place the drilling template ⑤ so that it is flush with the underside of the worktop (see illustration).
The gap between the underside of the worktop and front panel should be 5 mm.

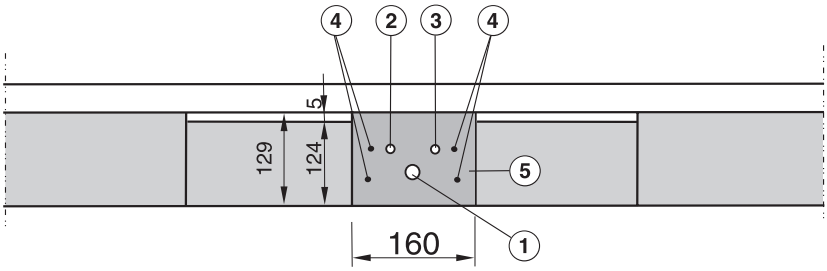

## Securing the switching unit

- Carefully place the stainless steel tepan plate facedown on top of the worktop, either to the left or right of the cut-out.

This must be done carefully to prevent damage to either the worktop or the tepan plate.

- Stick the sealing strip ② supplied to the edge of the tepan plate from below (see illustration).

- Place the switching unit in position, as illustrated with its spindle and indicator lights pressed from inside into the drill holes made previously. Secure the switching unit with the Spax screws ① supplied.

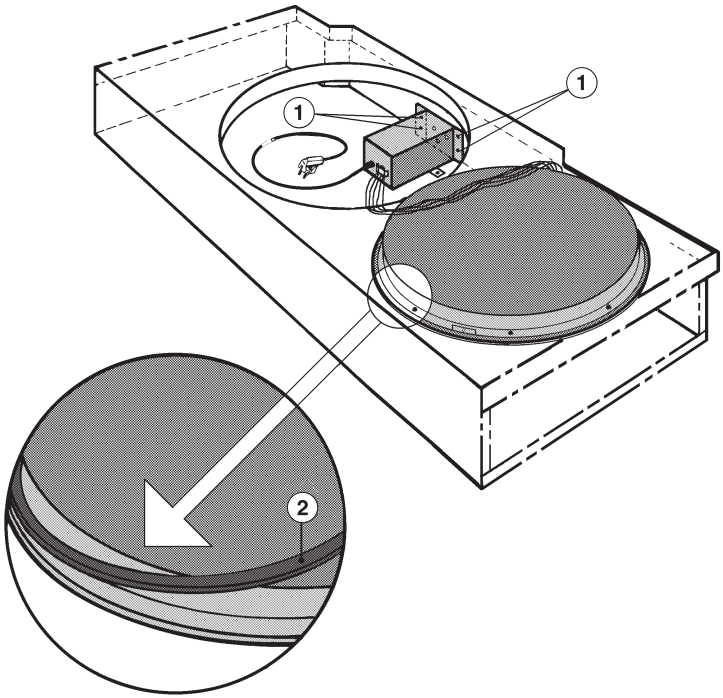

## Fitting the tepan plate

When lowering the tepan into the cut-out, ensure that the cables do not get trapped or damaged.

- Feed the connection cable down through the cut-out.
- Carefully lower the tepan into the cut-out. When doing this, make sure that the Miele logo ① is positioned above the switching unit (see illustration).

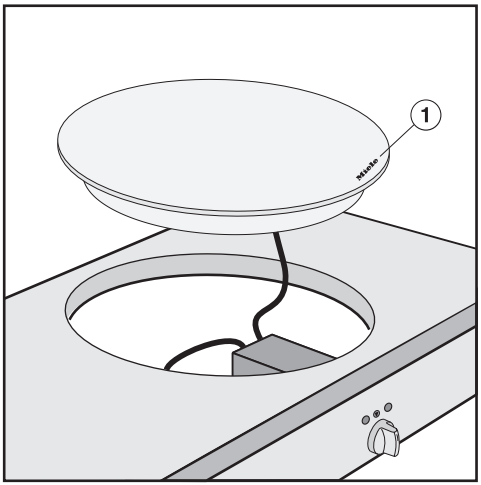


- Connect the tepan plate to the mains electricity supply (AC 230 V / 50 Hz).
- Any of the sealing strip which protrudes above the worktop should be removed using a sharp knife.

## Fitting the indicator light covers and the control

- Fit the control ③ on to the switching unit spindle with the "0" pointing to the top.
- Stick the symbol for the zero setting ④ centrally on the front panel in between the two holes drilled for the indicator lights.

Ensure that both the underside of the symbol sticker ④ and the surface of the front panel are clean, dry and free from grease before applying the sticker.

- Fit the **yellow** indicator light cover ① into the drill hole on the **left** and the **red** cover ② into the drill hole on the **right**.

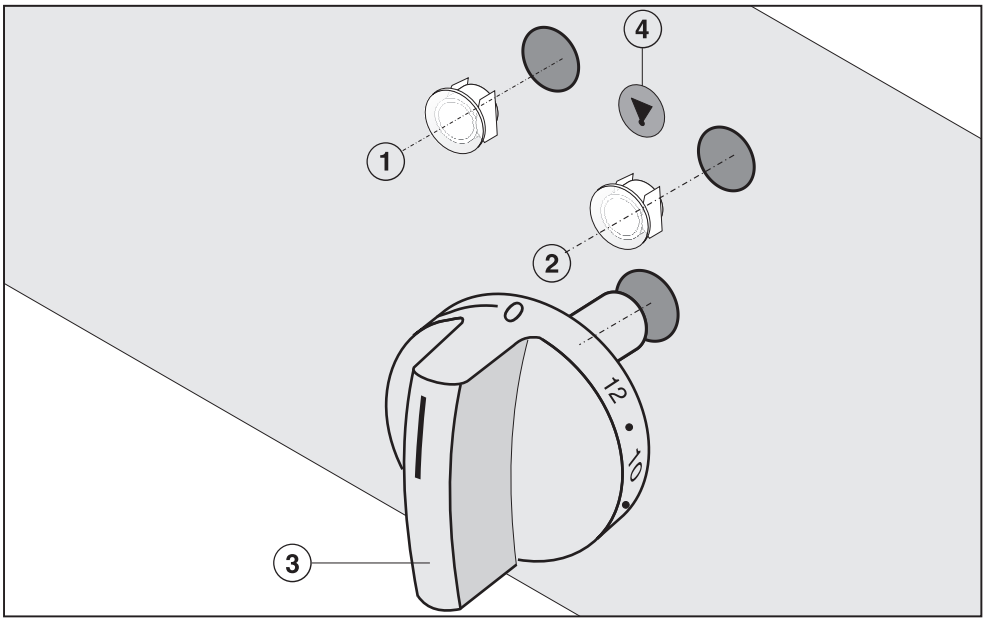

## Protective shelf

A protective shelf must be fitted immediately below the switching unit to ensure that the underside of the appliance cannot be accessed or touched after it has been built in.

A gap of 10 mm must be maintained between the shelf and the rear wall.

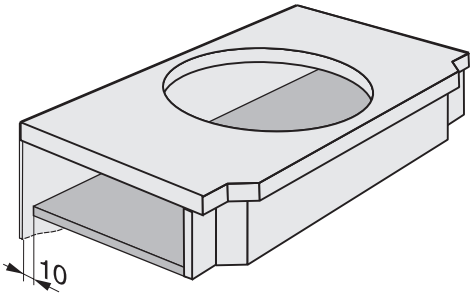


## Sealant

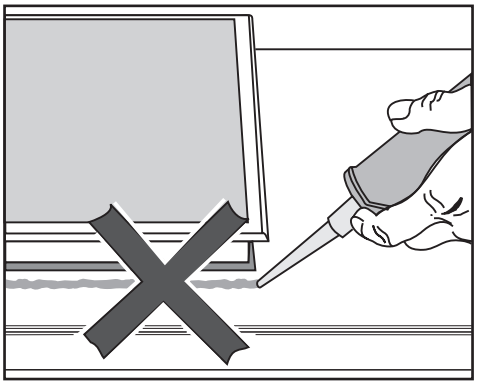

Do not use any sealant unless expressly instructed to do so. The sealing strip under the edge of the top part of the tepan provides a sufficient seal for the worktop.

Do not use sealant between the frame of the top part of the tepan and the worktop.
This could cause difficulties if the tepan ever needs to be taken out for servicing and possibly result in damage to the frame or the worktop.

## Dimensions

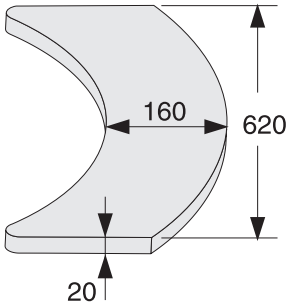


## Fitting the shelf

The shelf can be fitted either on the right or the left hand side of the mobile tepan unit.

- Screw the brackets supplied to the underside of the shelf (see illustration).

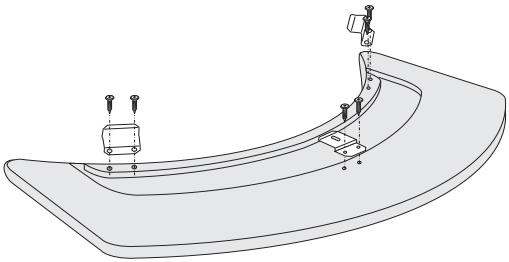

- Position the shelf on top of the handle so that the handle fits into the groove on the underside of the shelf.
- Secure the shelf with the screw supplied (see illustration).

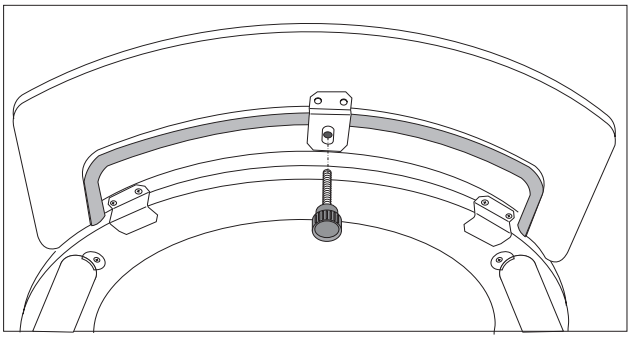

# Electrical connection

## General notes

All electrical work should be carried out by a suitably qualified and competent person, in strict accordance with current local and national safety regulations (BS 7671 in the UK).

Installation, repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

Ensure power is not supplied to the appliance until after installation work has been carried out.

Do not connect the appliance to the mains electricity supply via an extension lead. These do not guarantee the safety of the appliance.

## Mobile Tepan

Please ensure that the connection data quoted on the data plate match the household mains supply.

Connection should be made via a fused plug and switched socket which complies with national and local safety regulations and the on/off switch should be easily accessible.

For extra safety it is advisable to install a suitable residual current device (RCD).

When switched off there must be an all-pole contact gap of 3 mm in the isolator switch (including switch, fuses and relays).

**Important**

This appliance is supplied for connection to a single phase 230-240 V 50 Hz supply with a 3-core cable.

The wires in the mains lead are coloured in accordance with the following code:

Green/yellow = earth

Blue = neutral

Brown = live

**WARNING:**
**THIS APPLIANCE MUST BE EARTHED**

**Non-rewireable plugs BS 1363**

The fuse cover must be refitted when changing the fuse, and if the fuse cover is lost, the plug must not be used until a suitable replacement is obtained. The colour of the correct replacement cover is that of the coloured insert in the base of the plug, or the colour that is embossed in words on the base of the plug (as applicable to the design of plug fitted).

Replacement fuses should be ASTA approved to BS 1362 and have the correct rating. Replacement fuses and fuse covers may be purchased from your local electrical supplier.

## Built-in Tepan

The appliance must only be operated when built-in. This is to ensure that all electrical parts are shielded. Live parts must not be exposed.

Please ensure that the connection data quoted on the data plate match the household mains supply.

Connection should be made via a suitable isolator or a double pole fused spur connection unit which complies with national and local safety regulations and the on/off switch should be easily accessible after the appliance has been built in.

If the switch is not accessible after installation (depending on country) an additional means of disconnection must be provided for all poles.

For extra safety it is advisable to install a suitable residual current device (RCD).

When switched off there must be an all-pole contact gap of 3 mm in the isolator switch (including switch, fuses and relays).

**Important**

This appliance is supplied for connection to a single phase 230-240 V 50 Hz supply with a 3-core cable.

The wires in the mains lead are coloured in accordance with the following code:

| | |
|---|---|
| Green/yellow | = earth |
| Blue | = neutral |
| Brown | = live |

**WARNING**
**THIS APPLIANCE MUST BE EARTHED**

**Important**

The electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system, which complies with current local and national safety regulations. It is most important that this basic safety requirement is present and tested regularly and if there is any doubt the electrical wiring in the home should be inspected by a qualified electrician. The manufacturer cannot be held liable for the consequences of an inadequate earthing system such as an electric shock.

The manufacturer cannot be held liable for damage which is the direct or indirect result of incorrect installation or connection.

**United Kingdom**
Miele Co. Ltd.
Fairacres, Marcham Road
Abingdon, Oxon, OX14 1TW
Tel: 0845 365 0555
Fax: 0845 365 0777
Customer Contact Centre Tel: 0845 365 6600
E-mail: info@miele.co.uk
Internet: www.miele.co.uk

**Australia**
Miele Australia Pty. Ltd.
ABN 96 005 635 398
1 Gilbert Park Drive, Knoxfield, VIC 3180
Tel: (03) 9764 7130, Fax: (03) 9764 7149
Internet: www.miele.com.au

**China**
Miele Shanghai
Suite 4105-06, Plaza 66
1266 Nanjing Road West
Jing An District
Shanghai 200040, PRC
Tel: +86 21 6288 4200, Fax: +86 21 6288 4100
E-mail: mieleshanghai@cn.miele.com
Internet: www.miele.cn

**Miele (Hong Kong) Limited**
41/F - 4101, Manhattan Place
23 Wang Tai Road
Kowloon Bay
Hong Kong
Tel: (852) 2610 1331
Fax: (852) 2610 1013
Email: mielehk@miele.com.hk

**India**
Miele India Pvt. Ltd.
Ground Floor, Copia Corporate Suites
Plot No. 9, Jasola
New Delhi – 110025
Tel: 011-46 900 000, Fax: 011-46 900 001
E-mail: customercare@miele.in
Internet: www.miele.in

**Germany** - Miele & Cie. KG
Carl-Miele-Straße 29, 33332 Gütersloh

**Ireland**
Miele Ireland Ltd.
2024 Bianconi Avenue
Citywest Business Campus, Dublin 24
Tel: (01) 461 07 10, Fax: (01) 461 07 97
E-Mail: info@miele.ie, Internet: www.miele.ie

**New Zealand**
Miele New Zealand Limited
Unit L, 10-20 Sylvia Park Road
Mt. Wellington, 1060, Auckland, NZ
Tel: 0800 264 353, Fax: 0800 463 453
Internet: www.miele.co.nz

**Singapore**
Miele Southeast Asia
Miele Pte. Ltd.
163 Penang Road
# 04 - 02/03 Winsland House II
Singapore 238463
Tel: +65 6735 1191, Fax: +65 6735 1161
E-Mail: infosea@miele.com.sg
Internet: www.miele.sg

**South Africa**
Miele (Pty) Ltd
63 Peter Place, Bryanston 2194
P.O. Box 69434, Bryanston 2021
Tel: +27 (0) 11 548-1900
Fax: +27 (0) 11 548-1935
E-mail: info@miele.co.za
Internet: www.miele.co.za

**United Arab Emirates**
Miele Appliances Ltd.
P.O. Box 11 47 82
Gold & Diamond Park
Sheikh Zayed Road
Building 6 / Offices Nos. 6-214 to 6-220
Dubai
Tel: +971-4-341 84 44
Fax: +971-4-341 88 52
E-Mail: info@miele.ae
Internet: www.miele.ae

Alteration rights reserved / 3210

M.-Nr. 06 760 290 / 04

CE